

**Coventry Foundation**

**British Leyland Tools**

<b><u>Tool No.</u></b>	<b><u>Description</u></b>	<b><u>Secondary Tool Nos.</u></b>	
<b><u>18G 34A</u></b>			
18G 47 ½			
18G 47 B/1			
18G 47A J2	Bevel pinion Bearing Remover/Replacer Adapter		
18G 47A5			
18G 47AS/2			
18G 47B 6/1			
18G 47BD/2	Differential Bearing Adapter Remover		
18G 47BG/1	Adapter Set Remover/Replacer Mainshaft Bearing and Speedo Gear	2053 S4221 A19	
18G 47BG/1			
18G 47BG/2			
18G 47BG/3			
18G 47BG/4			
18G 47C	Bearing Remover, Basic tool Adapter Ring	2041/1, S4221 A-Z1	
18G 127 2/5			
18G 131			
18G 131C			
18G 134	Bearing and Oil seal Replacer - Basic Tool	SL1A	
18G 134 BD	Bearing and Oil Seal Replacer - Basic Tool	550	
18G 134BC			
18G 134DB	Crankshaft Primary Gear Oil Seal Replacer Adapter		
18G 134EB			
18G 134ED			
18G 144			
18G 152			
18G 178	Rear Hub Nut Spanner		
18G 183A	Roller Clutch Assembly Ring		
18G 191 1/1	Adapter, Remover Oil Pump Barrel	L178	
18G 191M	Bevel Pinion Setting Gauge		
18G 207	Dummy Pinion		
18G 207 B1	Bearing Pre-load Gauge		
18G 223	Pinion Pre-load Adapter		
18G 251			
18G 251	Hydraulic Pressure Test Gauge		
18G 257	Pressure Test Adapter	L88A	
18G 258	Circlip Pliers, Large - Basic Tool		
18G 262	Rear Hun Nut Spanner		

<u>Tool No.</u>	<u>Description</u>	<u>Secondary Tool Nos.</u>	
18G 284			
18G 284	Impulse Extractor, UNF Thread- Basic Tool		
18G 2841/1	Impulse Extractor, UNF Thread- Basic Tool		
18G 2841A			
18G 284AAA	Main Bearing Cap Remover Adapter, UNF		
18G 284AW	First Motion Shaft Remover Adapter		
18G 285	Adapter - Converter - Impulse Extractor		
18G 304 (2)			
18G 304 2/9	Front and Rear Hub Remover		
18G 304F			
18G 304M	Bolt Adapter 3/8 " UNF		
18G 304M/1	Flywheel and Clutch Remover Adapter, Early Type		
18G 304N			
18G 363	Flywheel and Clutch Remover Adapter, Late Type		
18G 502K	Hub Remover, Wire Wheels		
18G 570	Pressure Hose and Monitor		
18G 572			
18G 579			
18G 589 05 07	First and Third Motion Shaft Bearing Replacer		
18G 613			
18G 617/A2	Third Motion Shaft Bearing Remover		
18G 617A	Roller Bearing Outer Rear Remover/Replacer		
18G 669	Roller Bearing Outer Rear Remover/Replacer		
18G 702			
18G 804J	Rear Clutch Piston and Seal Replacer		
18G 1002			
18G 1004	Circlip Pliers, Small		
18G 1016	Circlip Pliers		
18G 1032	Rear Clutch Spring Compressor		
18G 1039	Wire Wheel Hub Remover		
18G 1040	Dummy Drive Shaft		
18G 1068A	Remover/Replacer, Primary Driver Gear Oil Seal	L213	
18G 1086	Adapter Set Replacer Oil Seal Converter Housing		
18G 1089	Converter Remover		
18G 1089A	Idler and Input Gauge Set		
18G 1097	Gauge Set Adapter		
18G 1112	Retainer, Forward Clutch		
18G 1118	Circlip Pliers		
18G 1150	Oil Pump Body Socket		
18G 1150C	Piston Pin Remover/Replacer		
18G 1150D			
18G 1150E/1	Adapter/Remover/Replacer Piston Pin		
18G 1192			

<u>Tool No.</u>	<u>Description</u>	<u>Secondary Tool Nos.</u>	
18G 1197	Swivel Pin Socket Wrench Front End		
18G 1197	Mainshaft Bearing and Speedometer Gear replacer		
18G 11972	Mainshaft Bearing and Speedometer Gear Replacer		
18G 1197-2			
18G 1198	Valve Spring Compressor and Keeper Remover/Replacer		
18G 1198	Mainshaft Circlip Replacer		
18G 1199	Mainshaft Circlip Replacer		
18G 1243	Mainshaft Circlip Remover		
18G 1272			
18G 1306			
18G 1317			
18G2841/1			
18G 2841A			
BLT 104			
BLT1073			
BLT1920			
BLT2041	Cylinder Head Stud Remover/Replacer		
BLT 2041/1			
BLT 2041/2			
BLT 2041/3			
BLT2089			
BLT5001	Smiths Instrumenmt Tester		
BLT5003	Crypton Synchro Check	HAC60	
BLT5005	Flaring Tool		
BLT5006	Sequential Seat Belt Harness Tester		
GT183	Oil Pump Body Remover	BLT2001, BLT2002, L183A, 2001	
HAC67	Hexagonal Knockoff Wrench	4014	
HAC68	Wire Wheel Hub Grease cap Remover	4015, ZMG 110	
HAC 69	Valve Spring Compressor and Keeper Remover/Replacer	Z104, 5004	
J25906			
JD16S4221			
L184			
L401A	Dashpot Sleeve & Relief Valve Body Remover		
M70	Pinion Bearing Outer Cup Replacer		
M84 B½	Pinion Bearing Setting Gauge Main Tool	2004	
S98A	Pre-Load Gauge	2015	
S108	Pinion Bearing Height Setting Tool	2018	
S109C	Rear Hub Remover	2020	
S124	Pinion Bearing Outer Cup Replacer	2021	

<u>Tool No.</u>	<u>Description</u>	<u>Secondary Tool Nos.</u>	
S317	Rear Hub Adjusting Nut Wrench	2029	
S318	Halfshaft Assembly Nut Wrench	2030	
S320	Front Suspension Spring Clips	2031	
S323/1			
S4211A-11			
S4211A-17/1			
S4221/A-16/1	Outer Taper Bearing Remover/Replacer Adapter		
S4221/A-7B1	Inner Axle Shaft Bearing Remover/Replacer Adapter		
S4221A-15A/1	Gearbox Ball Race Remover/Replacer Adapter		
S4221A-4A/2	Pinion Bearing Cone Replacer/Remover		
S422LAR			
SL 550-3			
ZJ107	Pozi-Drive Socket No. 4	1039	